


腳架組裝說明書


Tripod installation manual

2026/02/09
DSIN MACHINERY CO., LTD.

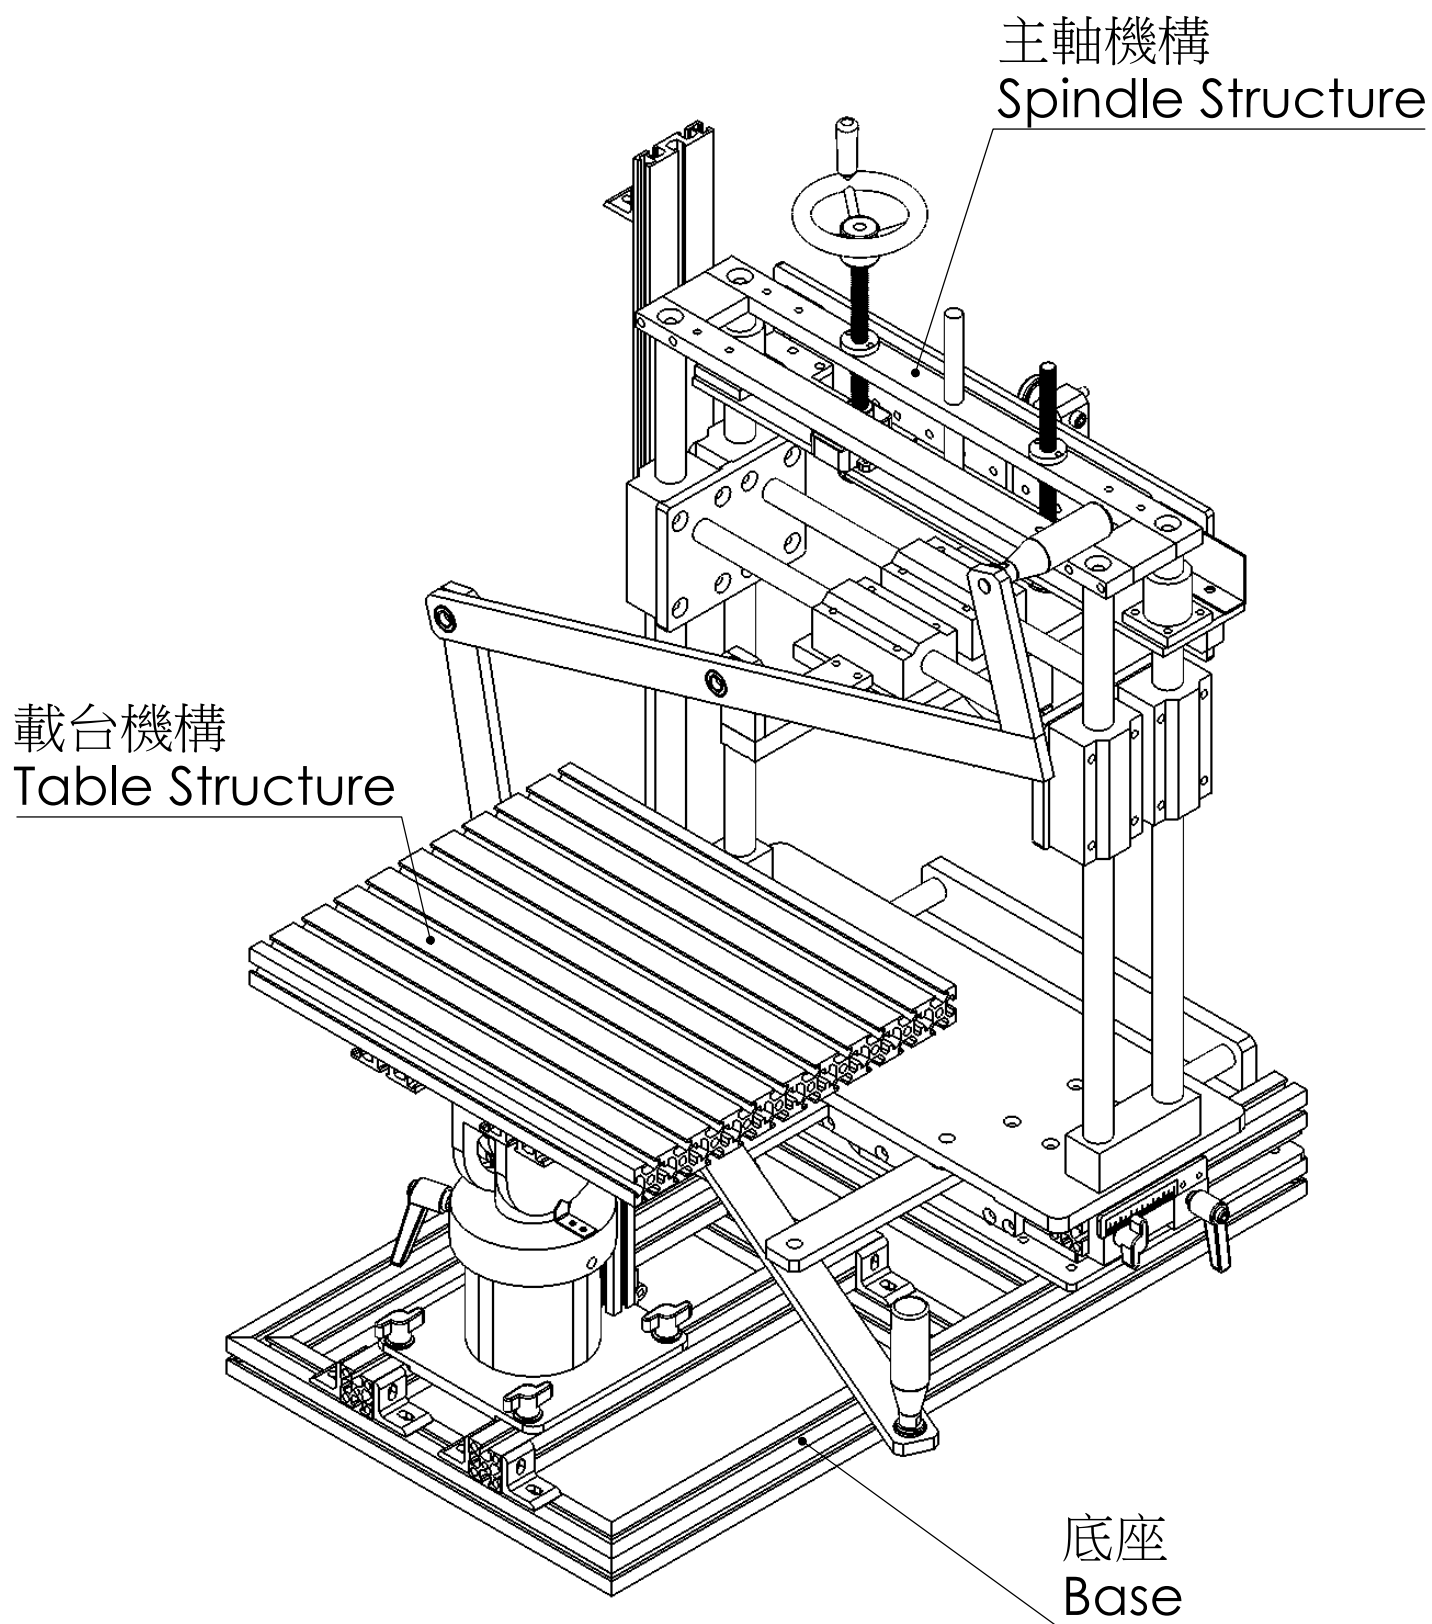


1. 鬆開並移出4顆螺絲
2. 移開載台機構
3. 從軌道移出4顆螺帽

1. Unlocke & remove 4 screws
2. Take out table structure
3. Remove 4 nuts of the track

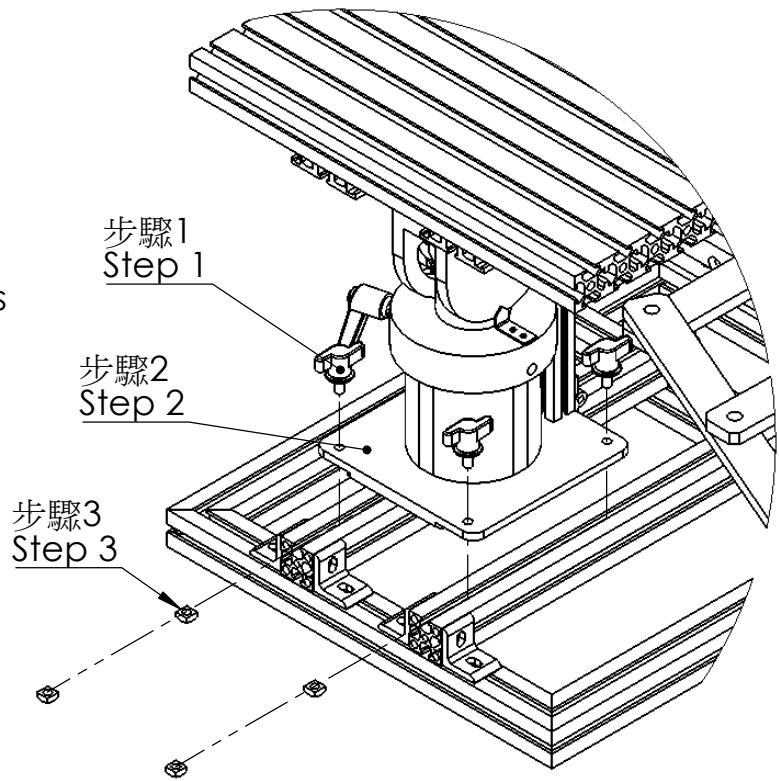


1. 鬆開並移出4顆螺絲
2. 移開載台機構
3. 從軌道移出4顆螺帽

1. Unlocke & take out 4 screws
2. Take out the table structure
3. Take out 4 nuts of the track

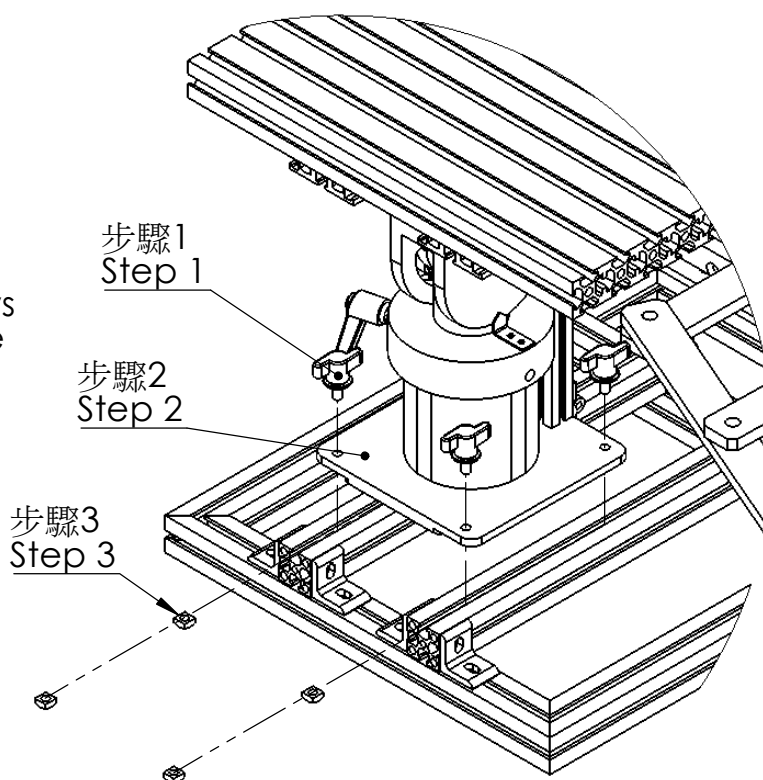


步驟2
Step 2

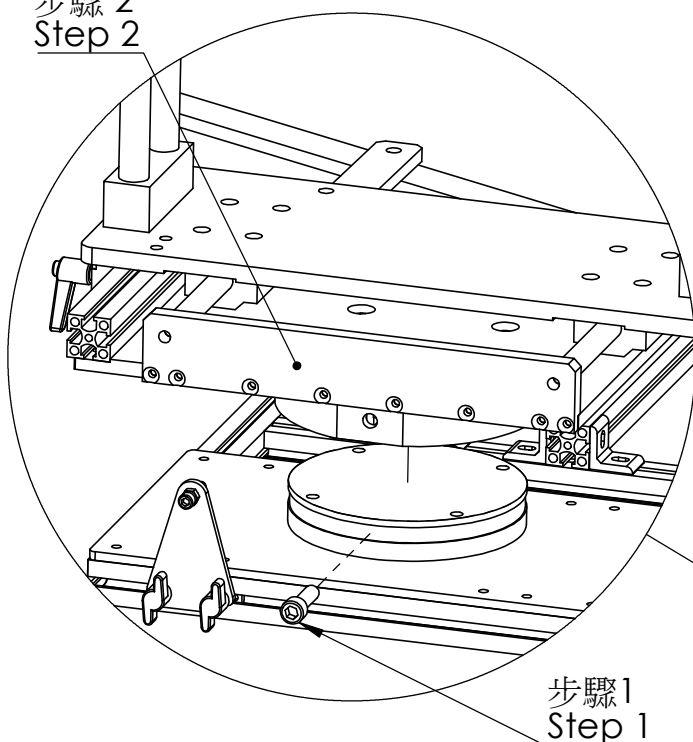


1. 鬆開並移出螺絲
2. 移開主軸機構

1. Unlocke & take out a screw
2. Take out the spindle structure

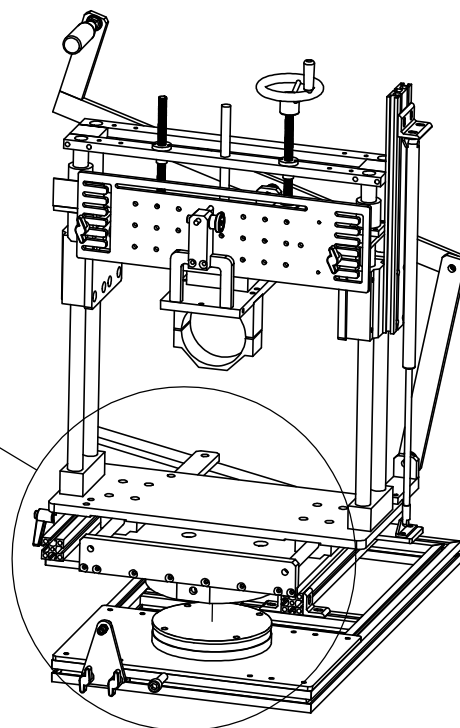



1. 鬆開並移開2顆螺絲
2. 移開0度定位板

1. Unlock & take out 2 screws
2. Take out the zero position plate

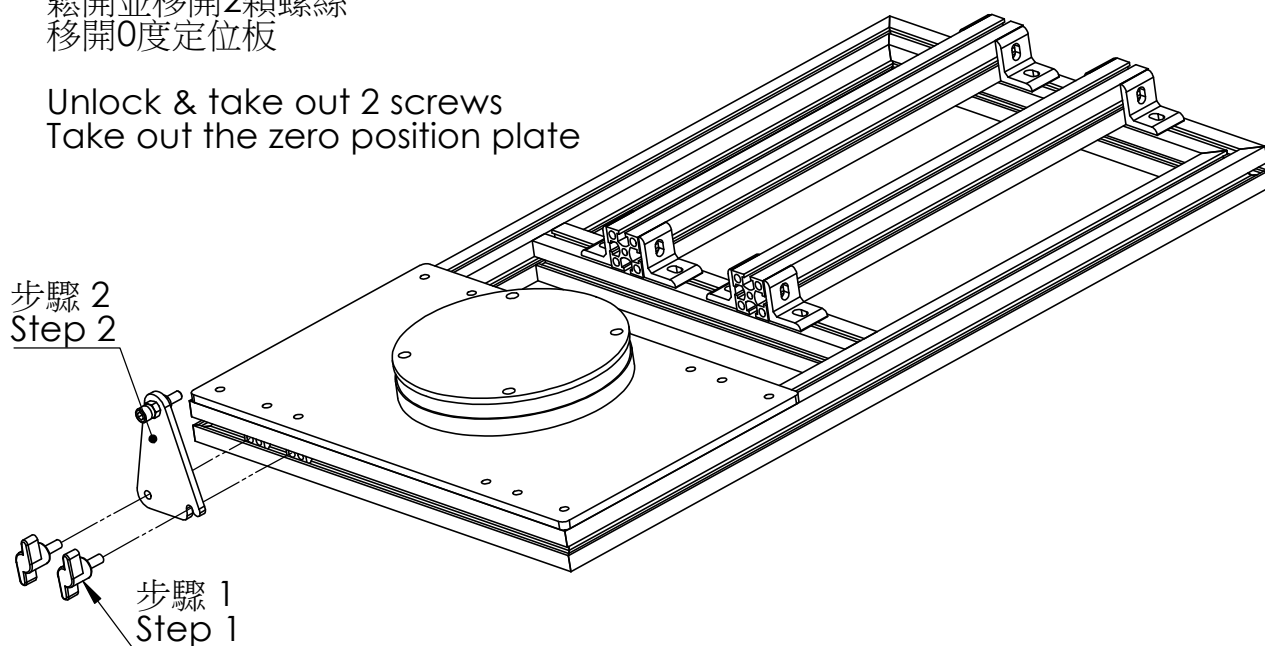


腳架安裝

Tirpod installation

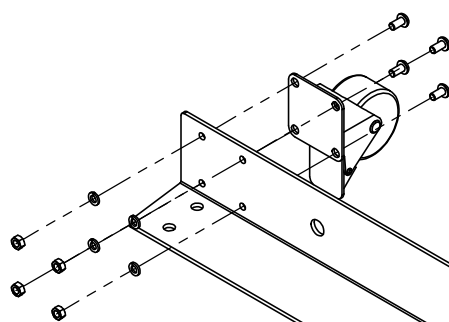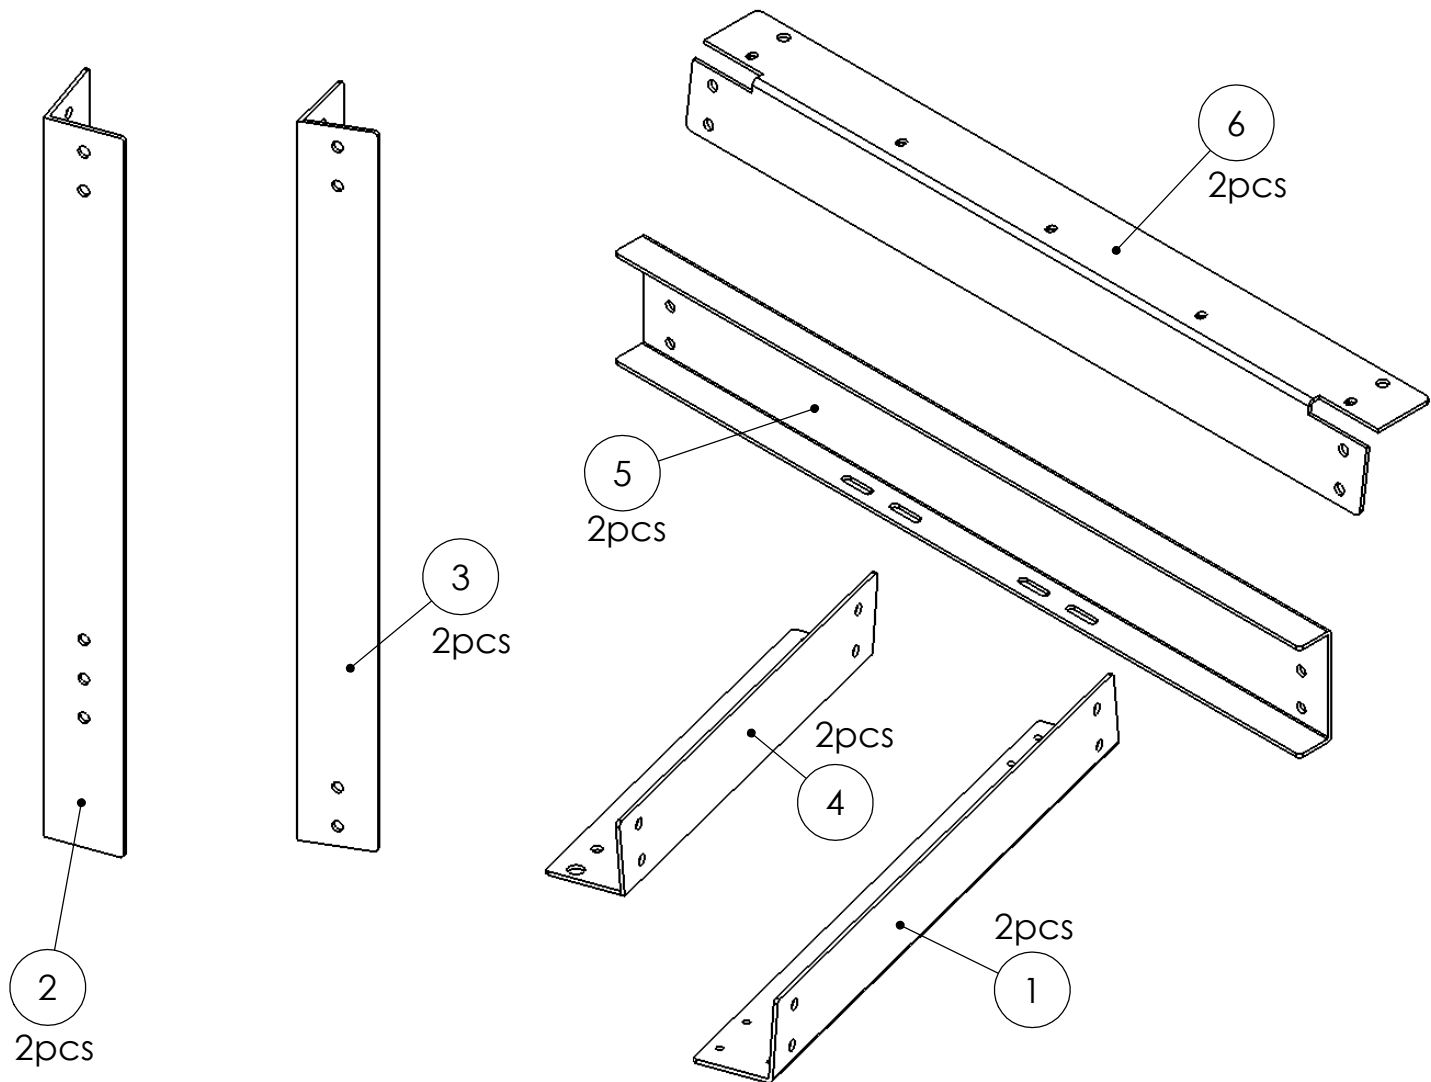


1. 使用編號3的螺絲組合包
2. 根據圖面將輪子鎖上


1. Use the screw package No. 3.
2. Follow the Drawings to install wheel.

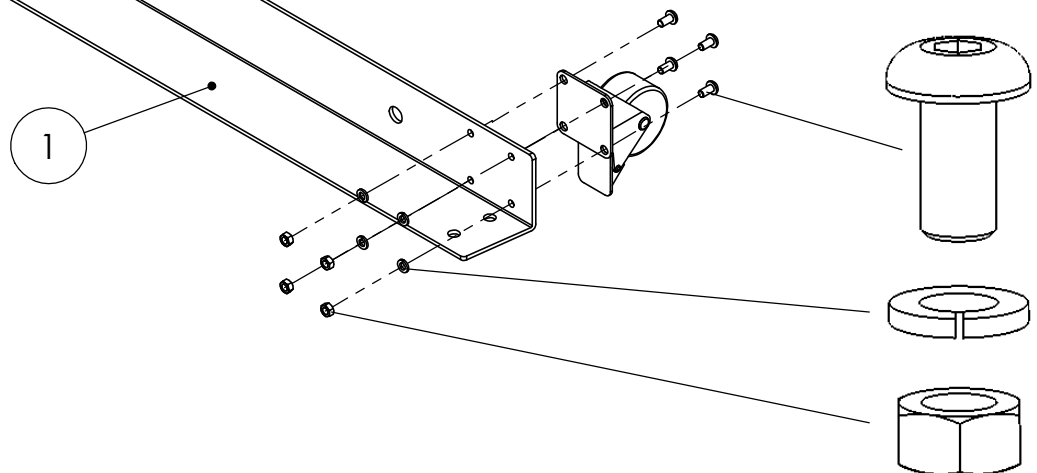

1. 使用編號4的螺絲組合包
2. 根據圖面組裝角鐵



1. Use the screw package No. 4 .
2. Follow the drawings to intall angle iron.

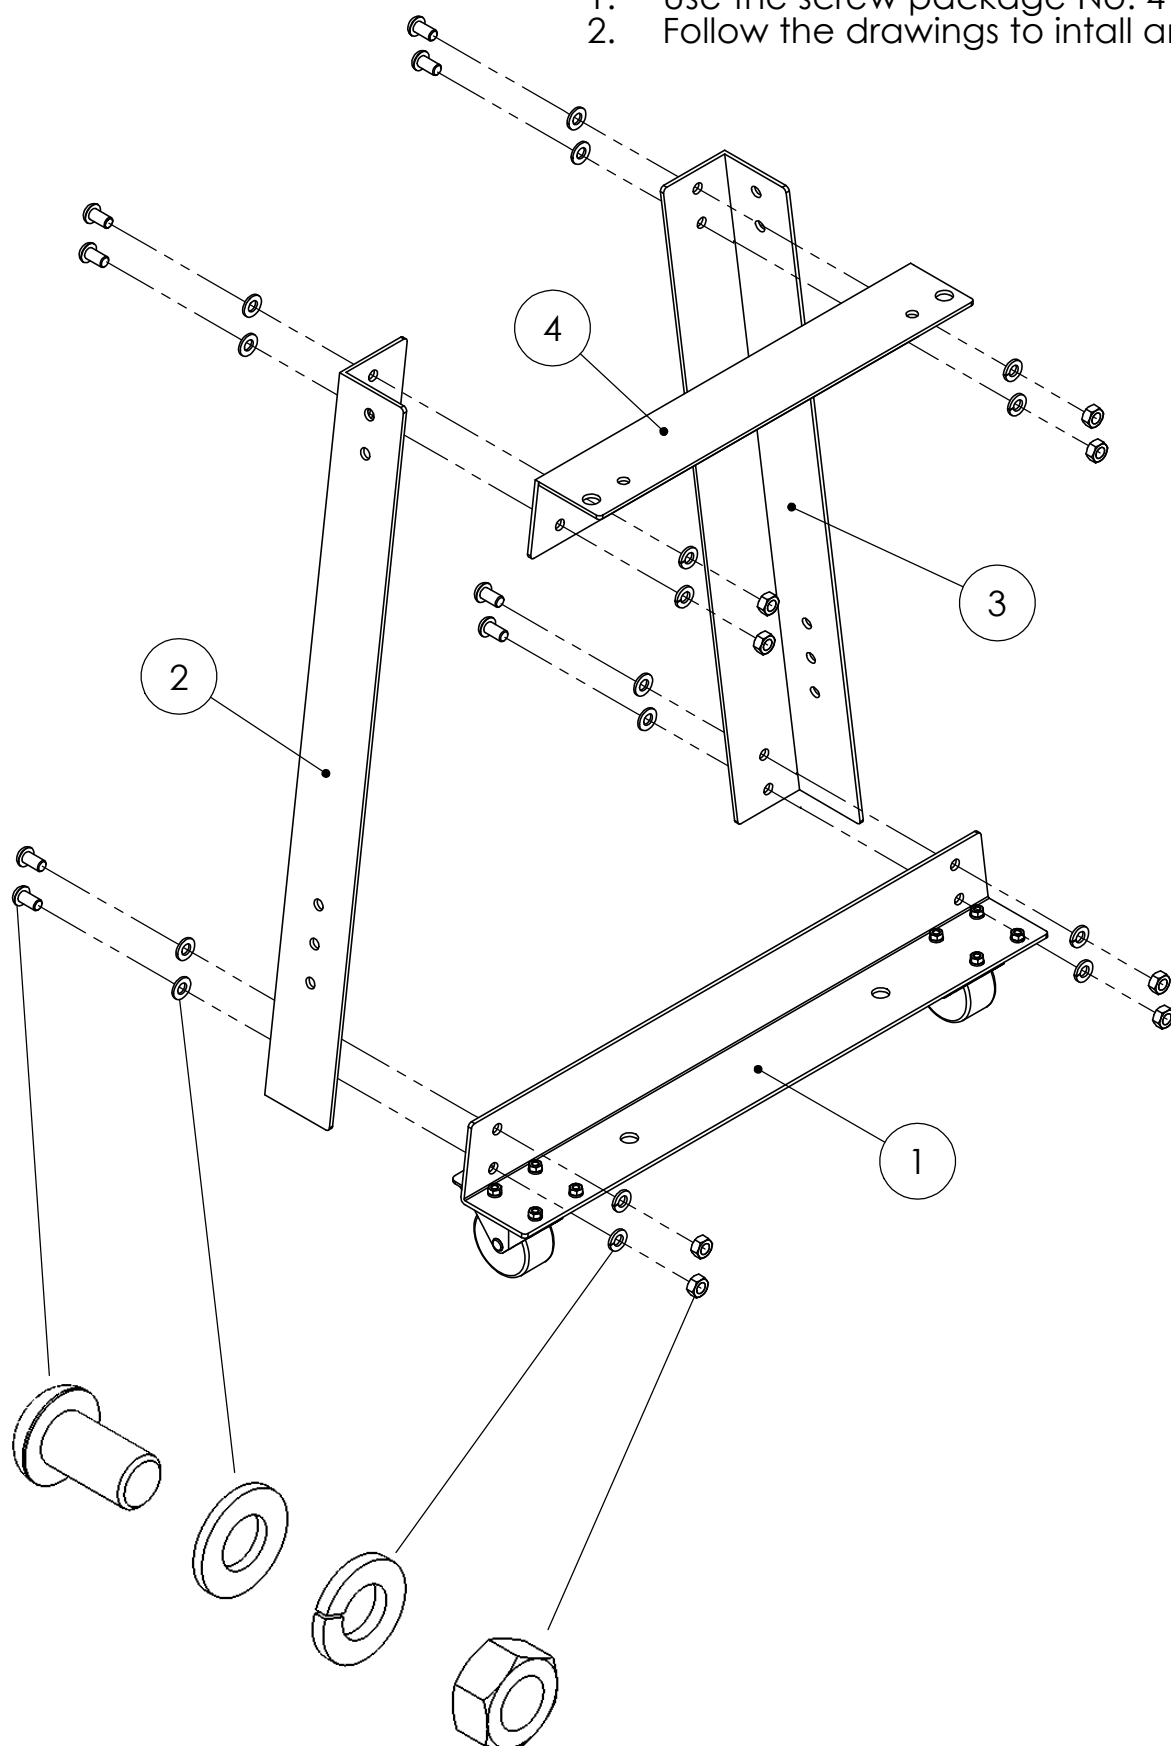

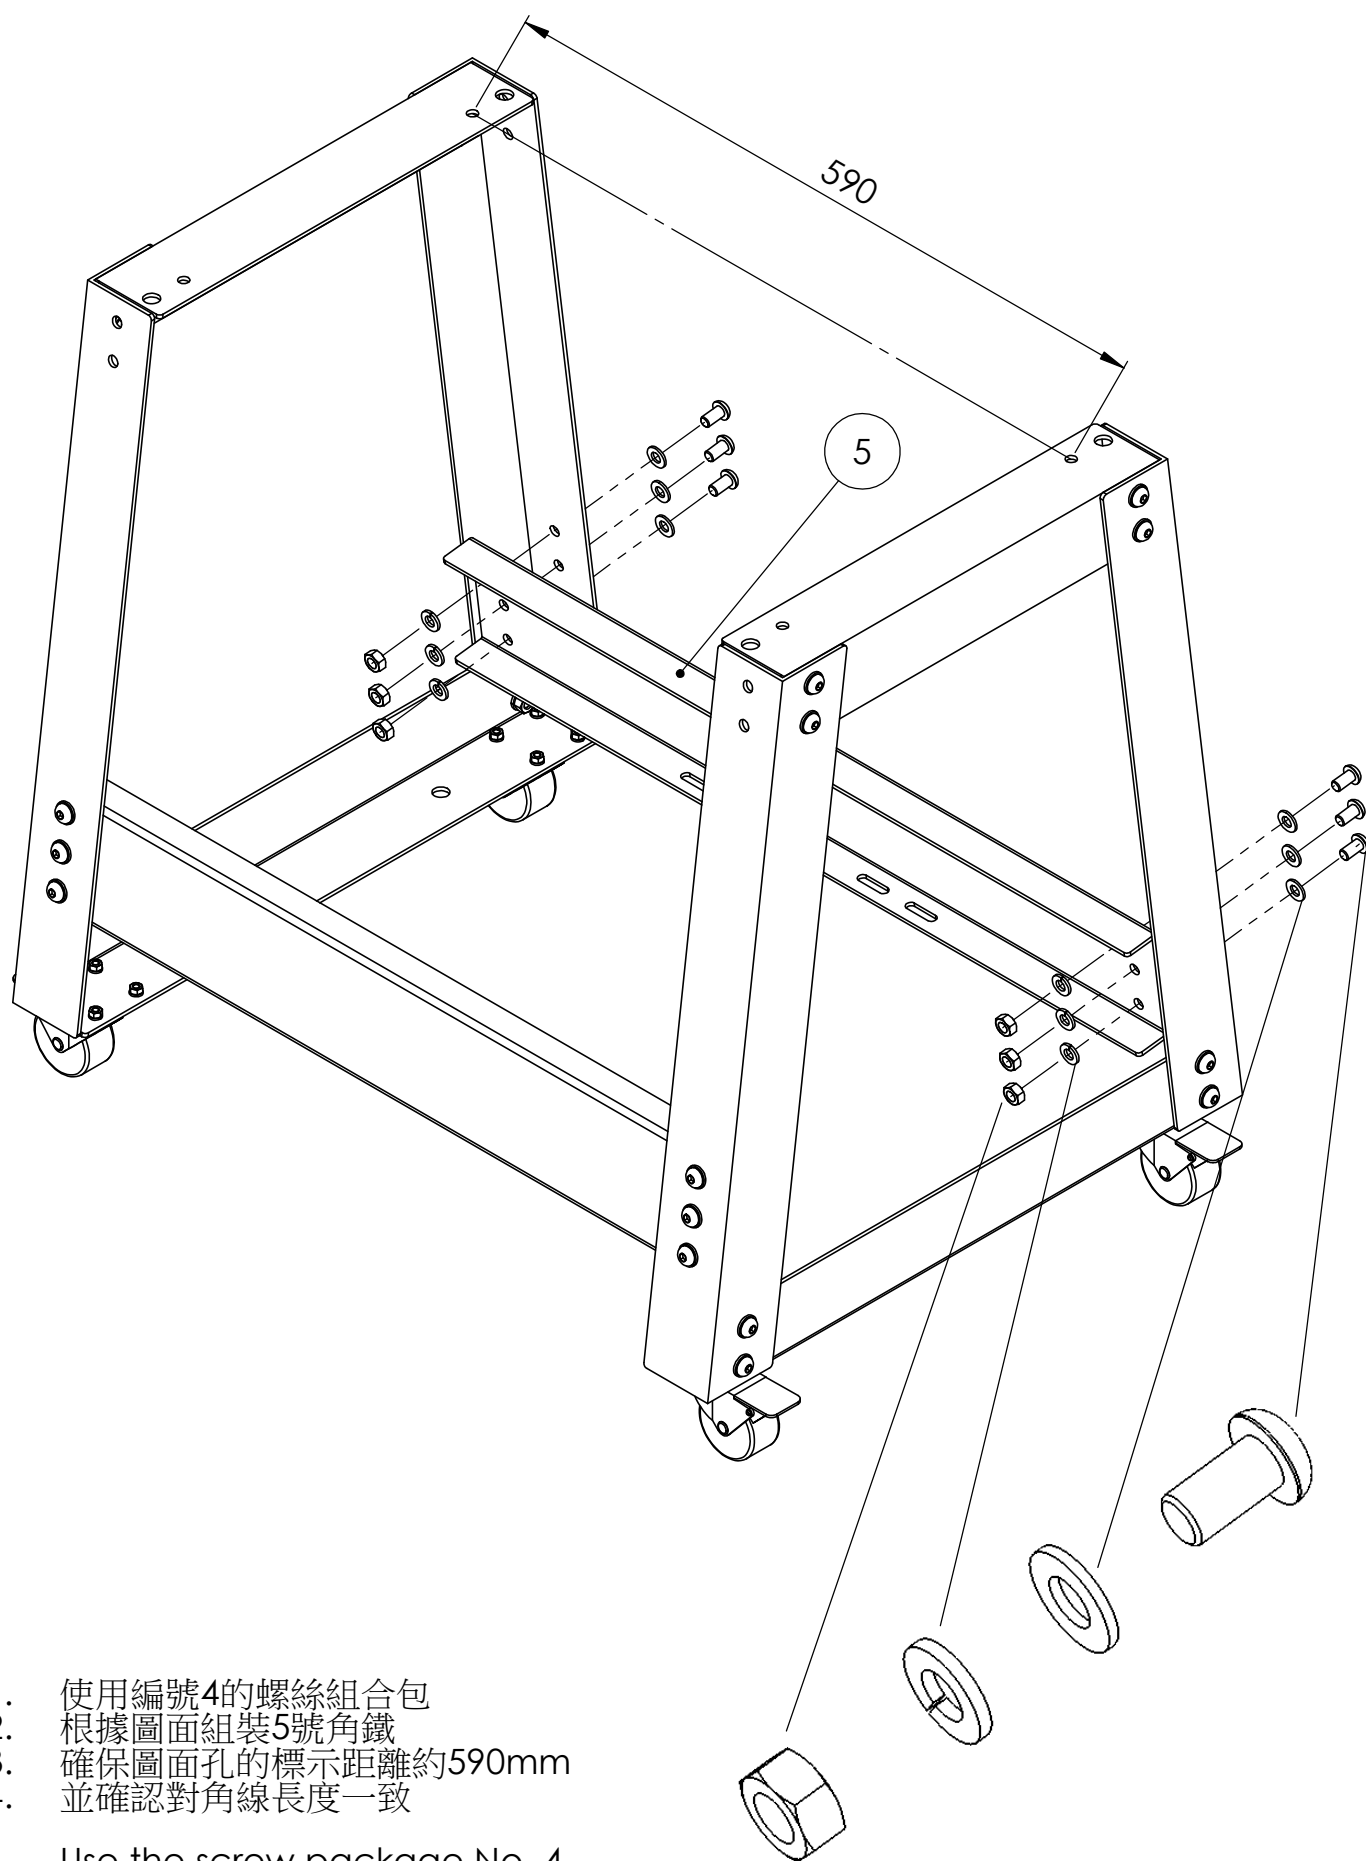


1. 使用編號4的螺絲組合包
2. 根據圖面組裝5號角鐵
3. 確保圖面孔的標示距離約590mm
4. 並確認對角線長度一致

1. Use the screw package No. 4 .
2. Follow the drawings to install angle iron No. 5.
3. As drawings the intervals between holes is 590mm.
4. Make sure the diagonal lengths are consistent.

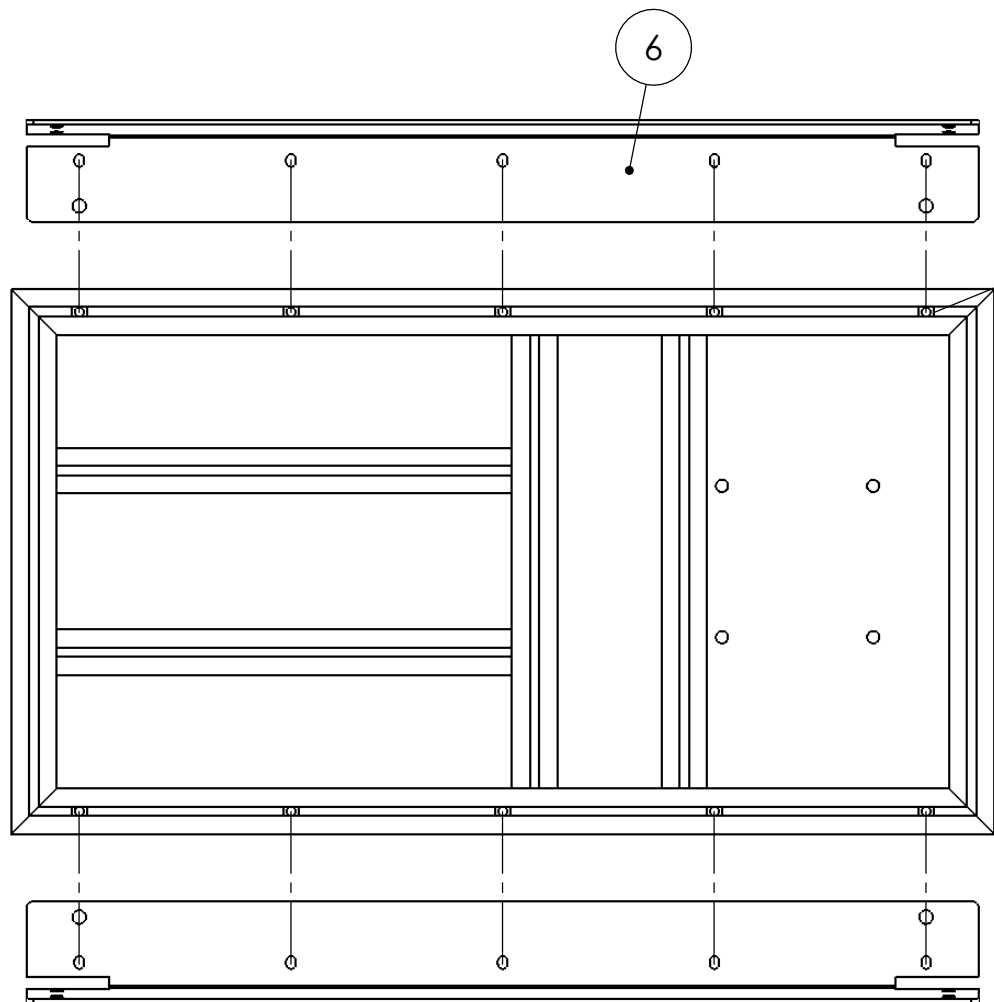

1. 將位於軌道內的M6方螺帽移動對齊6號角鐵


1. Align the square nuts with the hole on the angle iron No. 6.

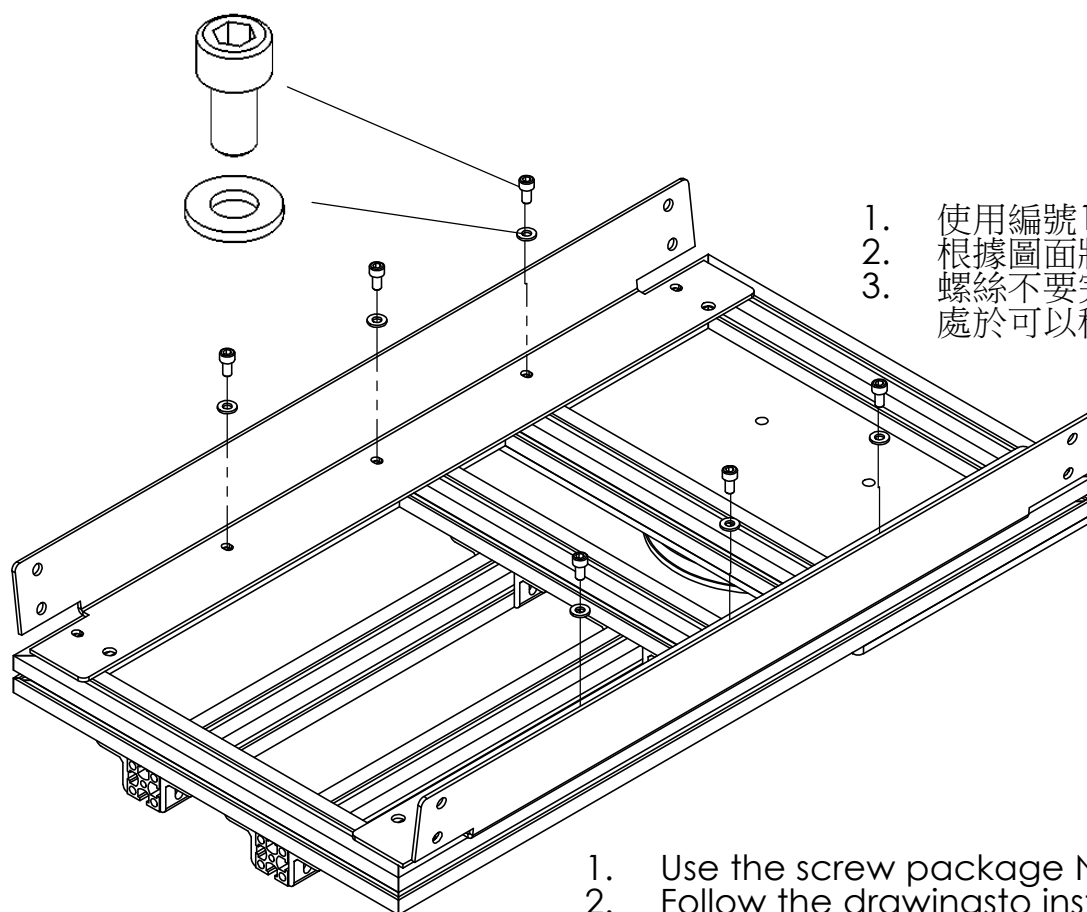

1. 使用編號1的螺絲組合包
2. 根據圖面將角鐵裝上
3. 螺絲不要完全鎖緊讓角鐵處於可以移動的狀態

1. Use the screw package No. 1 .
2. Follow the drawing to install angle iron.
3. Do not tighten the screws; leave the angle iron in a movable state.


1. Use the screw package No. 2 .
2. Follow the drawings to install angle iron.
3. Do not tighten the screws; leave the angle iron in a movable state.

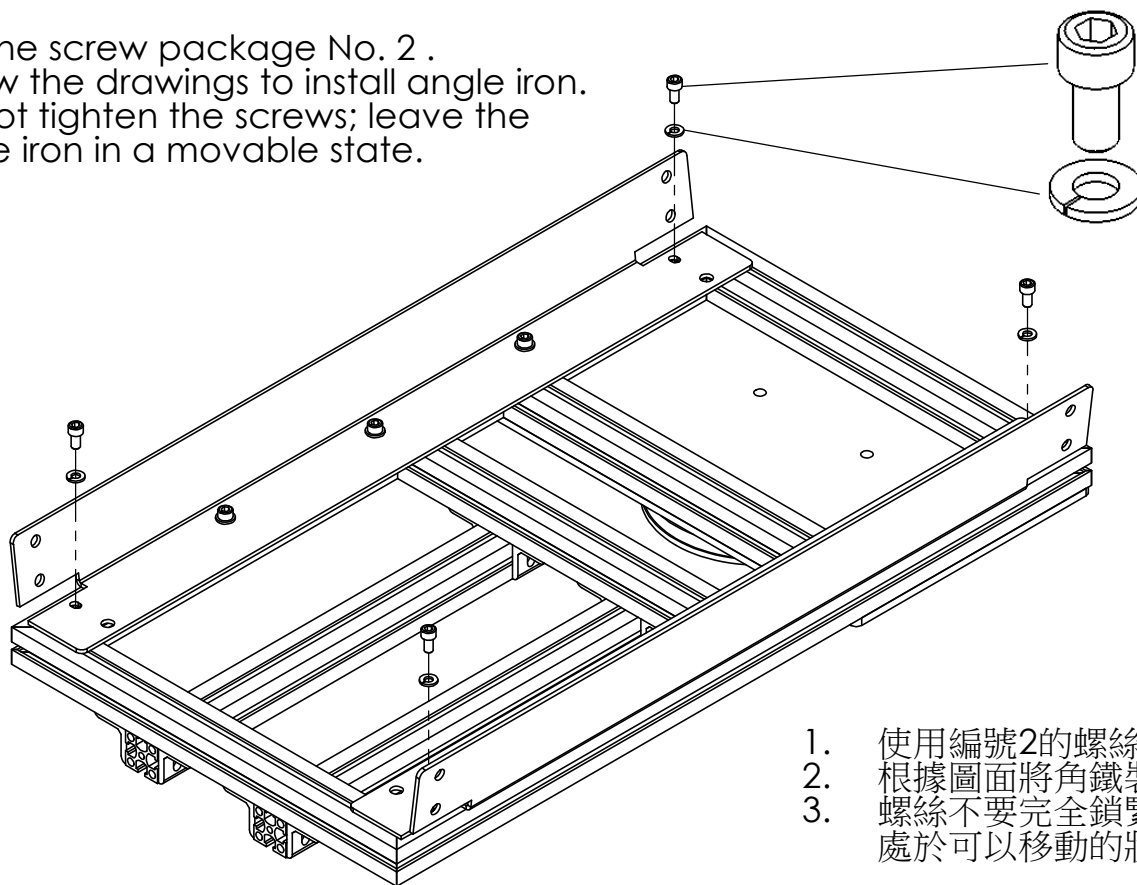


1. 使用編號2的螺絲組合包
2. 根據圖面將角鐵裝上
3. 螺絲不要完全鎖緊讓角鐵處於可以移動的狀態

1. 使用編號5的螺絲組合包
2. 根據圖面將底座與腳架結合
3. 螺絲不要完全鎖緊


1. Use the screw package No. 5 .
2. Follow the drawings to install base.
3. Do not tighten the screws.

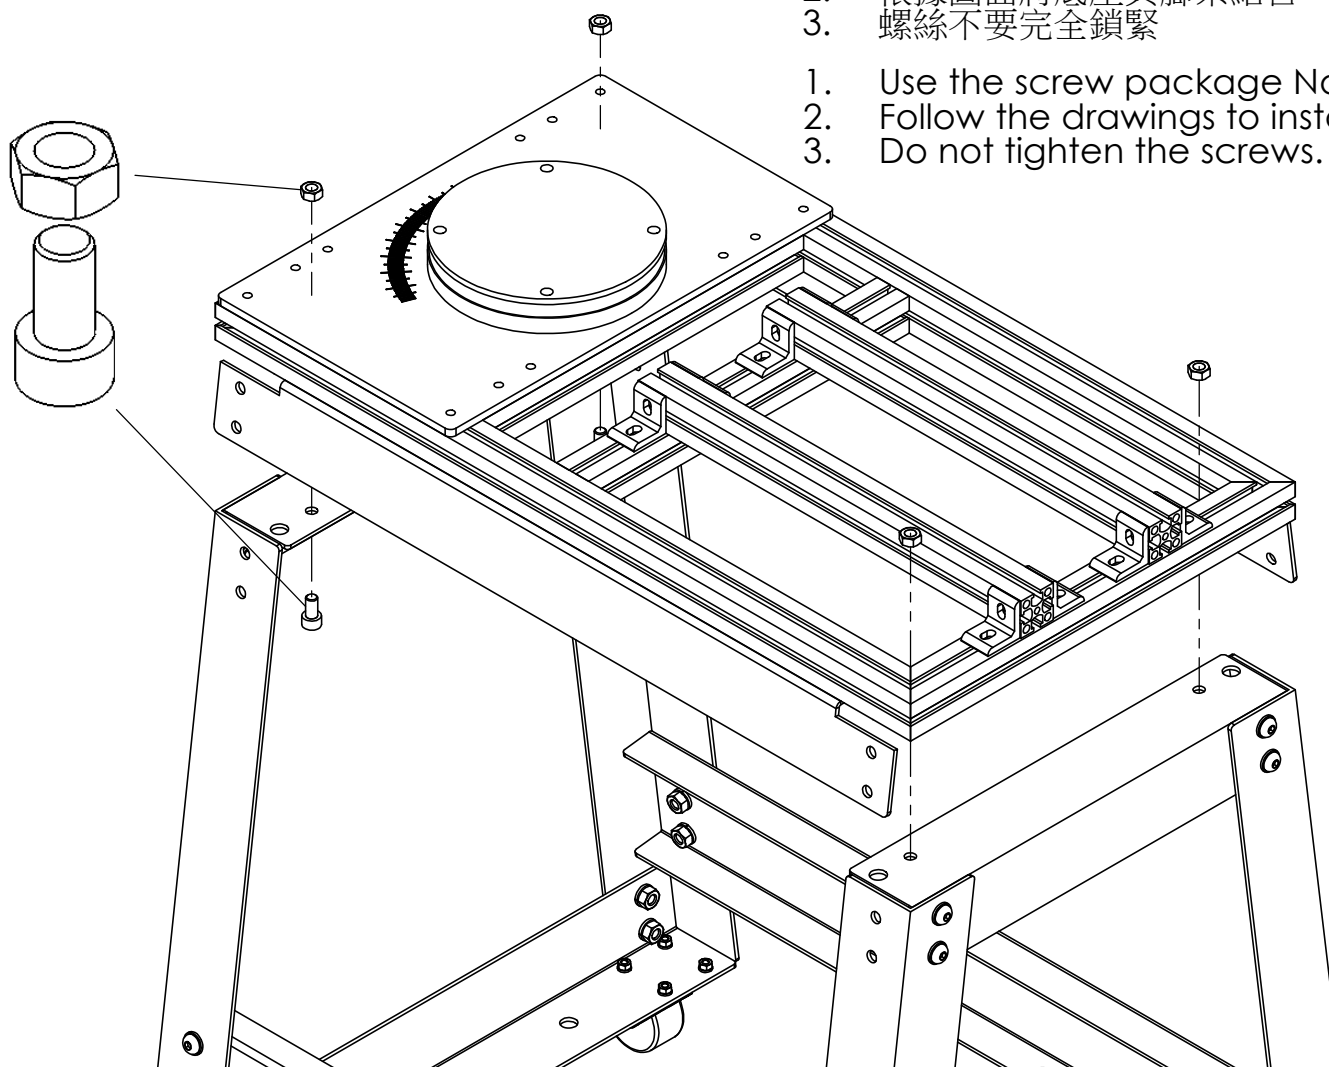

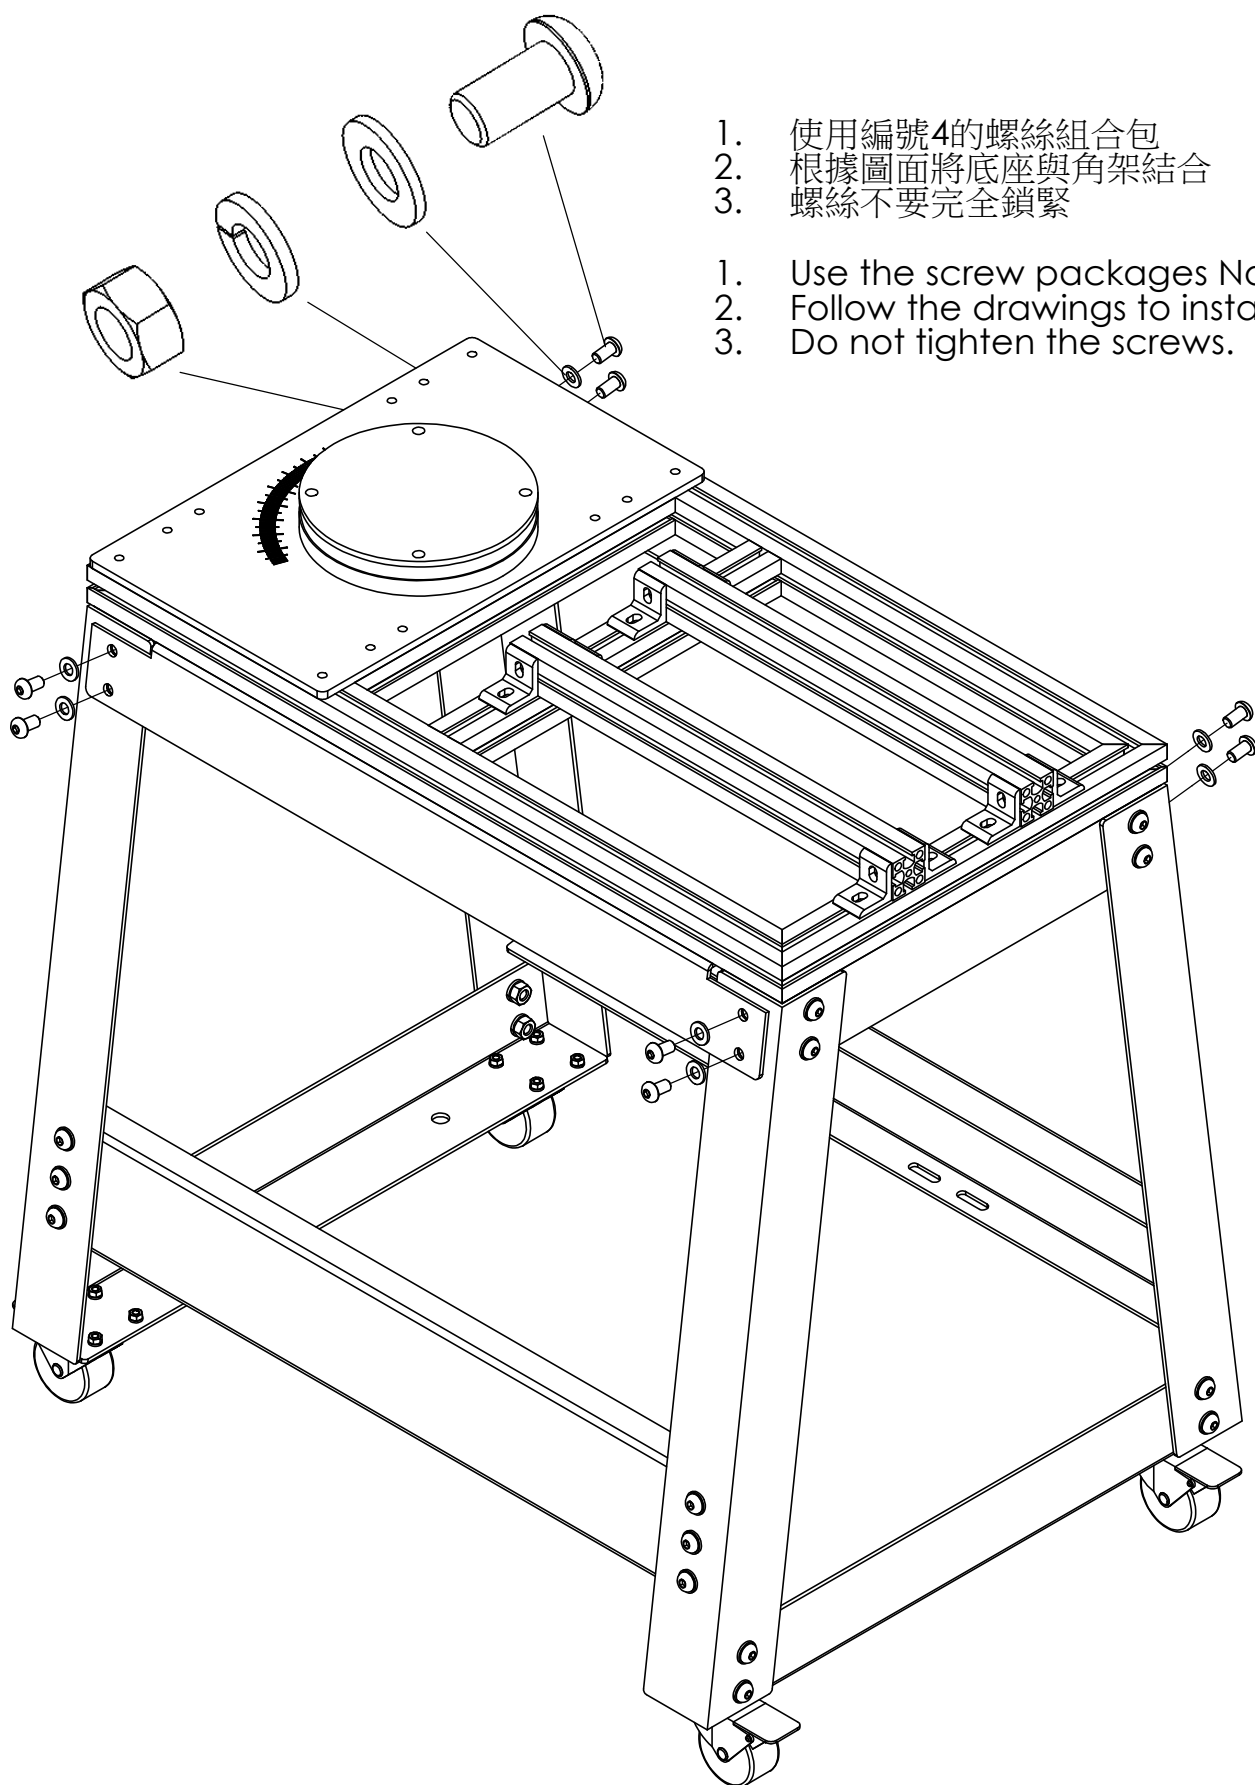

1. 使用編號4的螺絲組合包
2. 根據圖面將底座與角架結合
3. 螺絲不要完全鎖緊

1. Use the screw packages No. 4.
2. Follow the drawings to install base.
3. Do not tighten the screws.

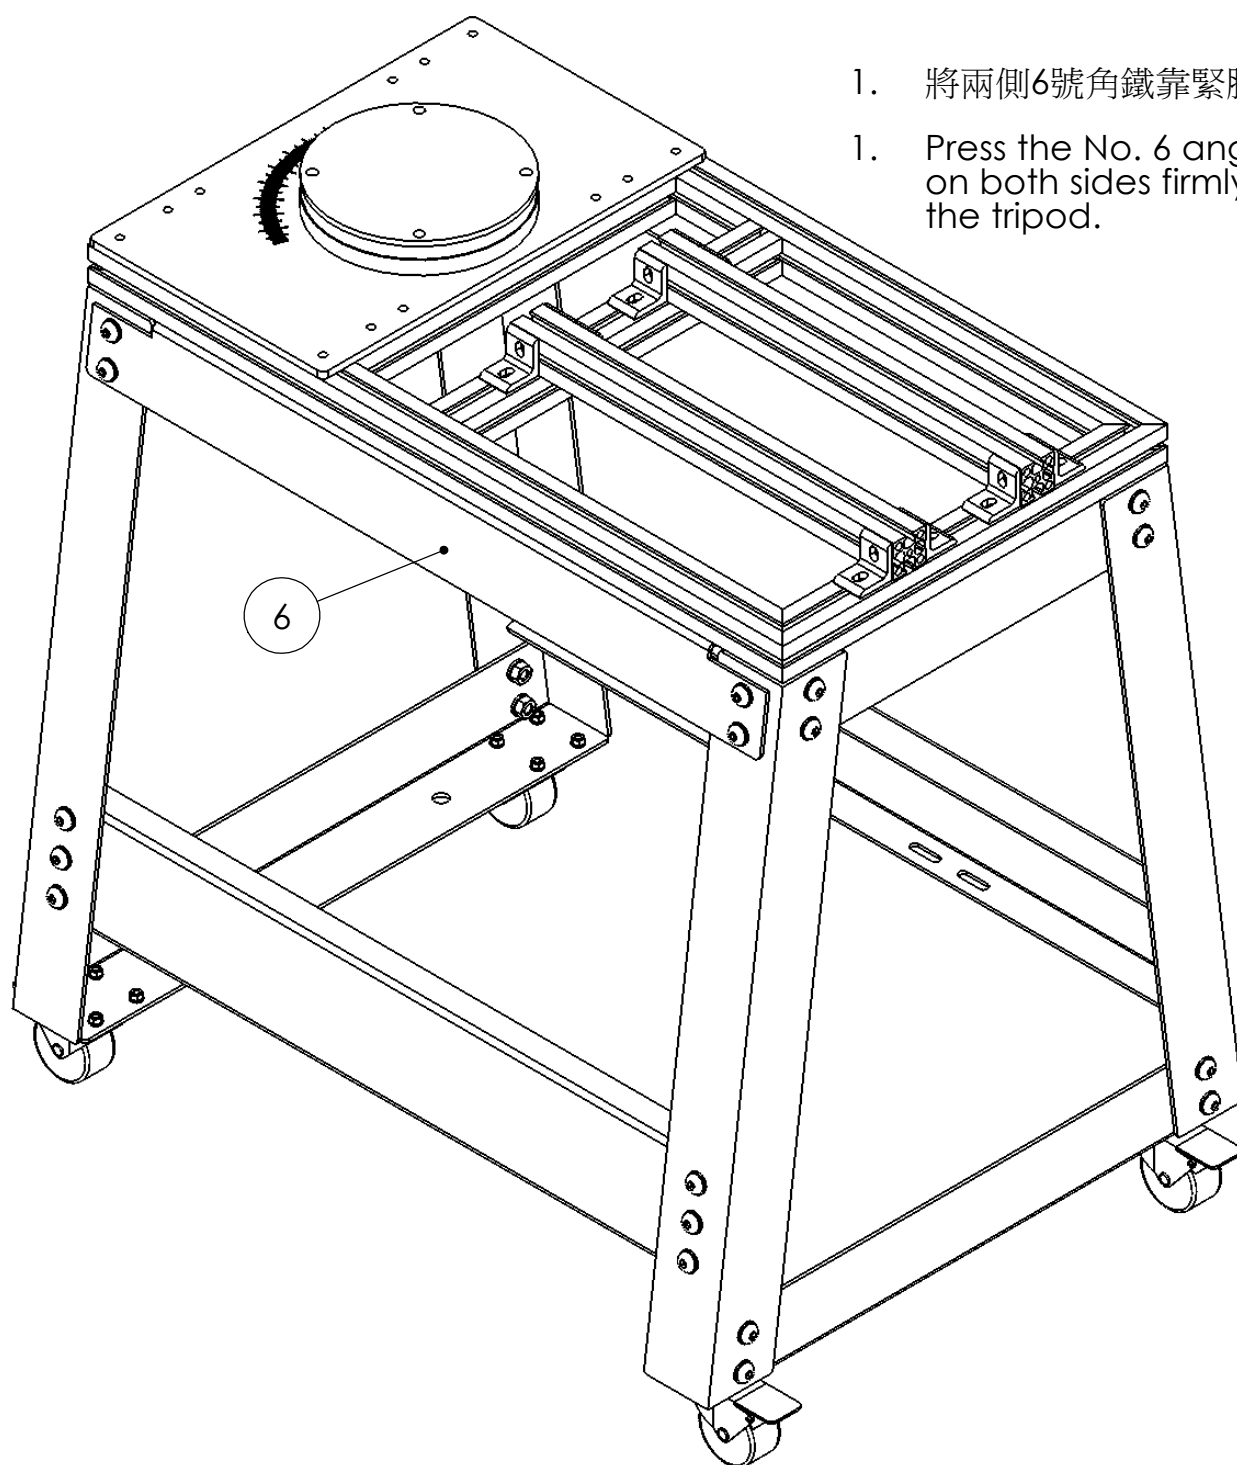

1. 將兩側6號角鐵靠緊腳架


1. Press the No. 6 angle irons on both sides firmly against the tripod.

1. 根據圖面的順序鎖緊螺絲

1. Follow the steps on the drawings to locking screws.


步驟1
鎖緊螺絲
共有4組

Step 1
Locking screws
4 groups

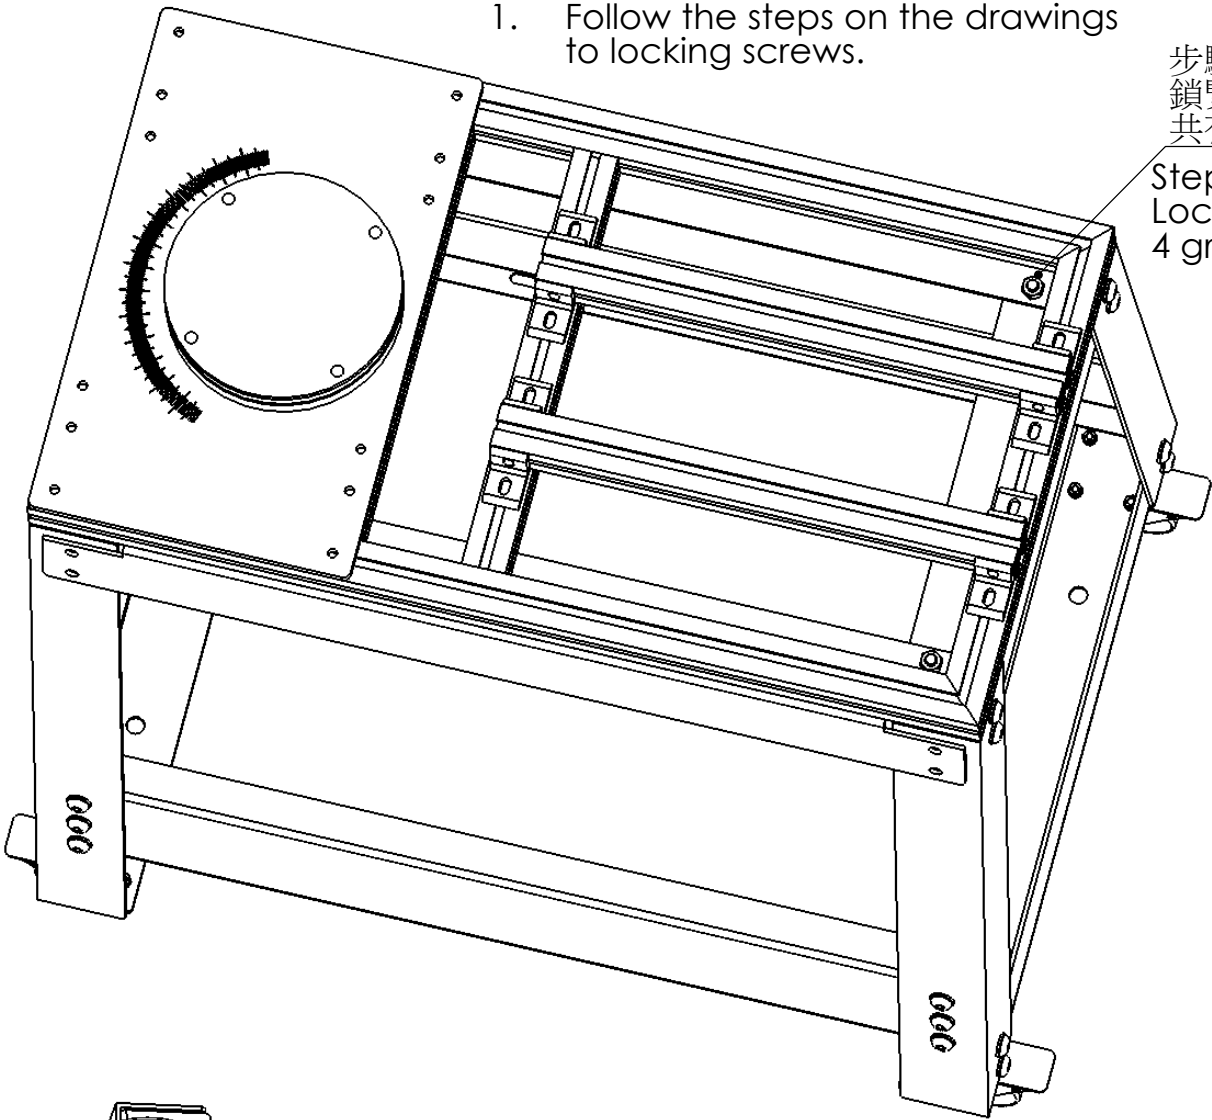


步驟2
鎖緊螺絲
共有10組

Step 2
Locking screws
10 groups

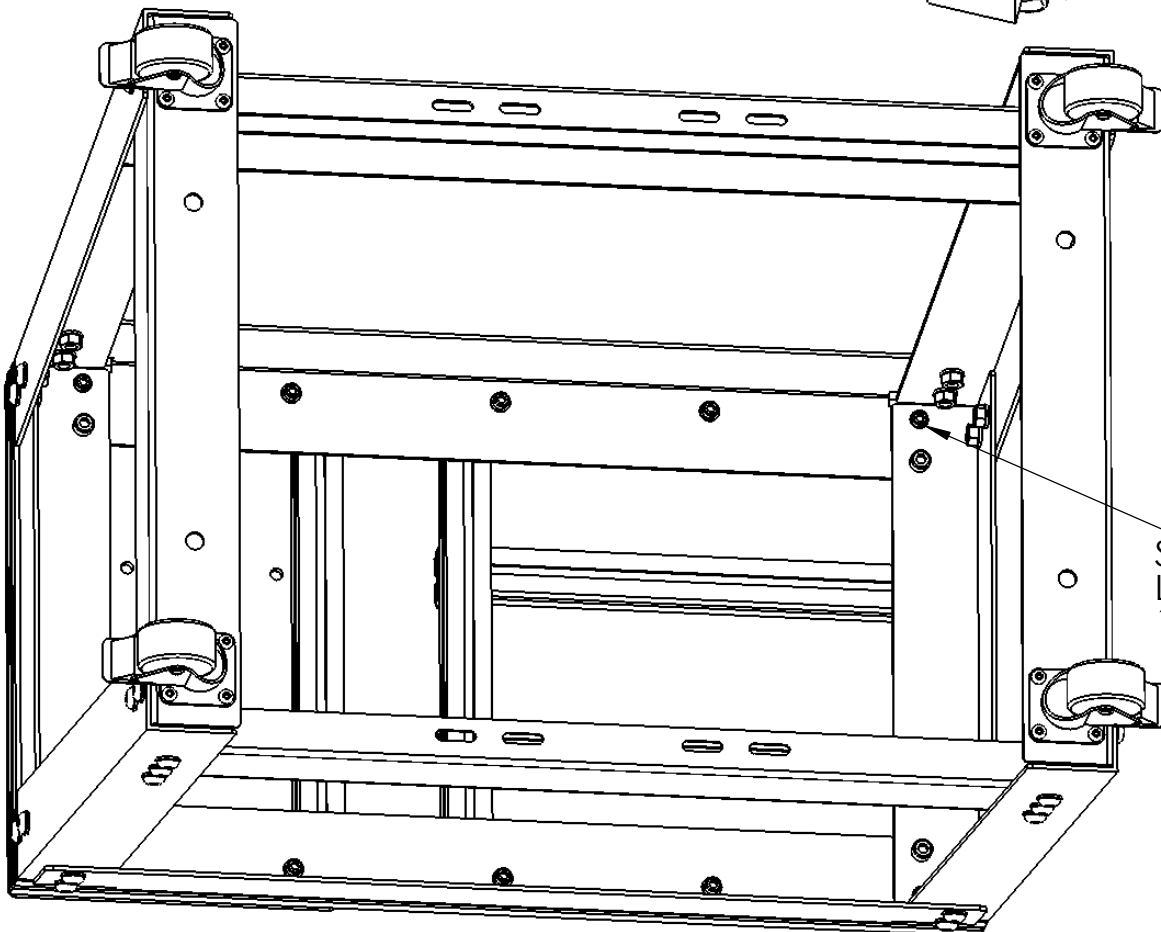



步驟3
鎖緊螺絲
共有8組

Step 3
Locking screws
8 groups

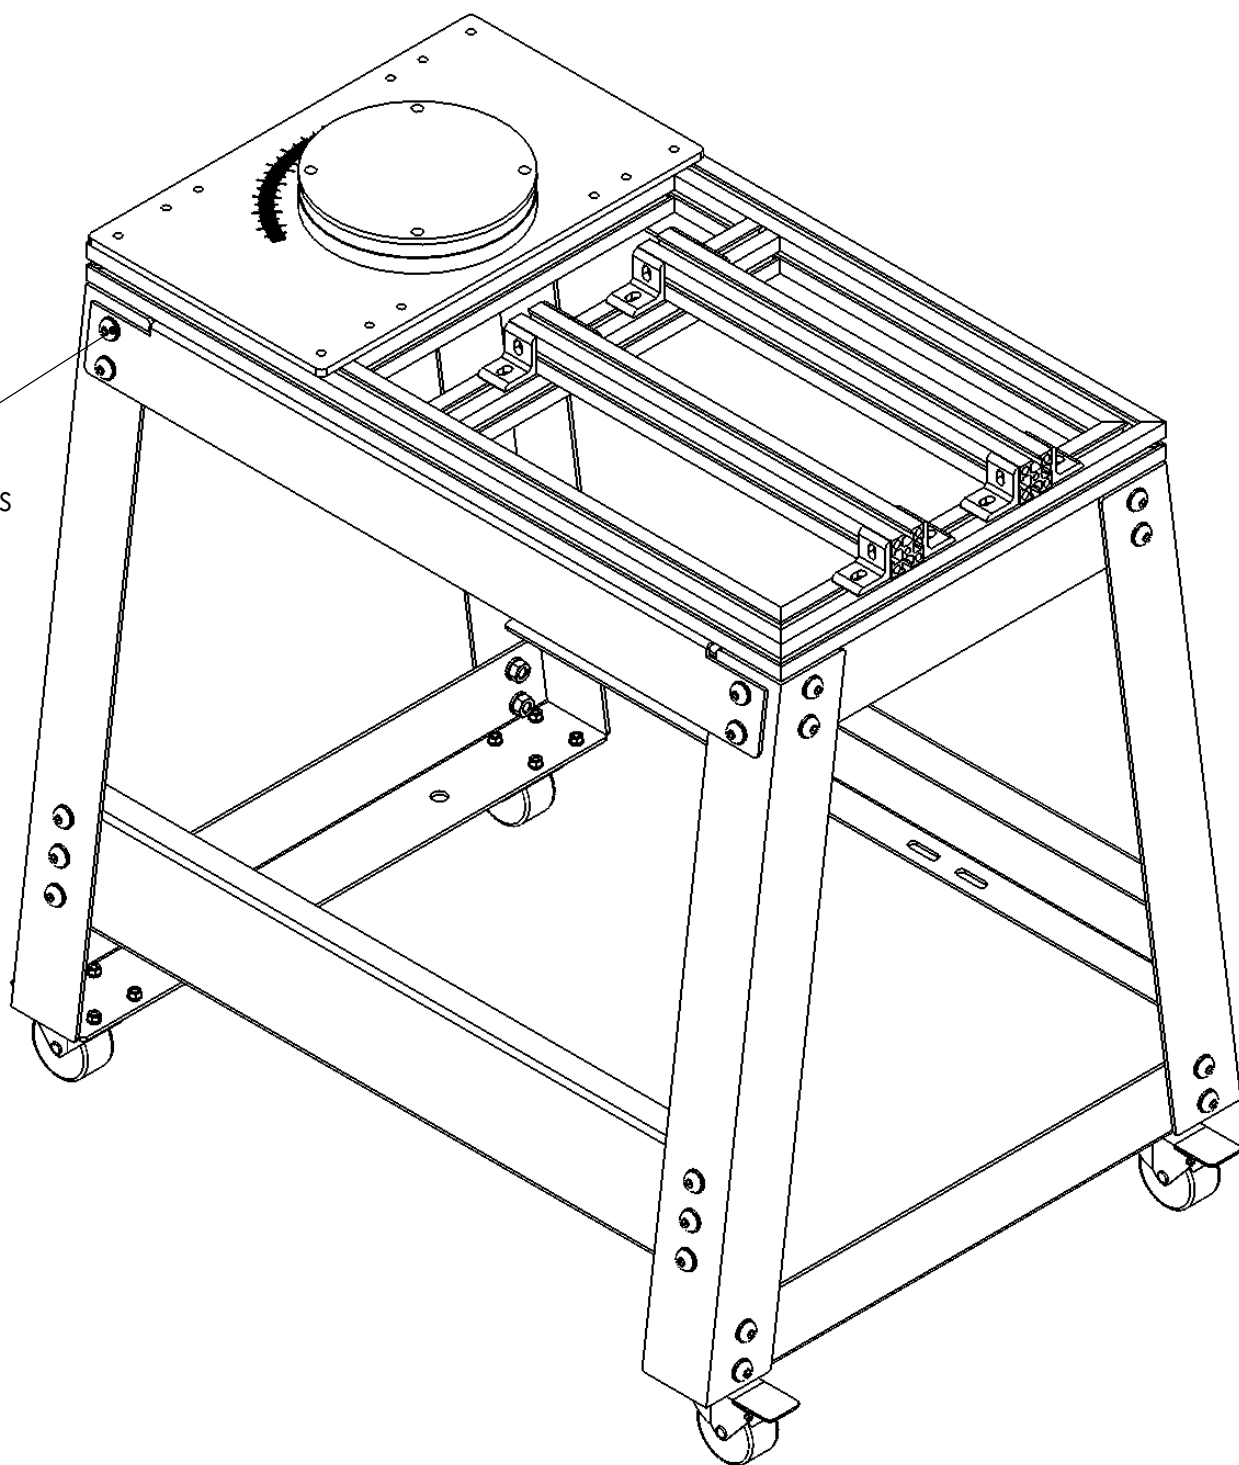


1. 裝回主軸側零度定位板
1. Install Zero location plate

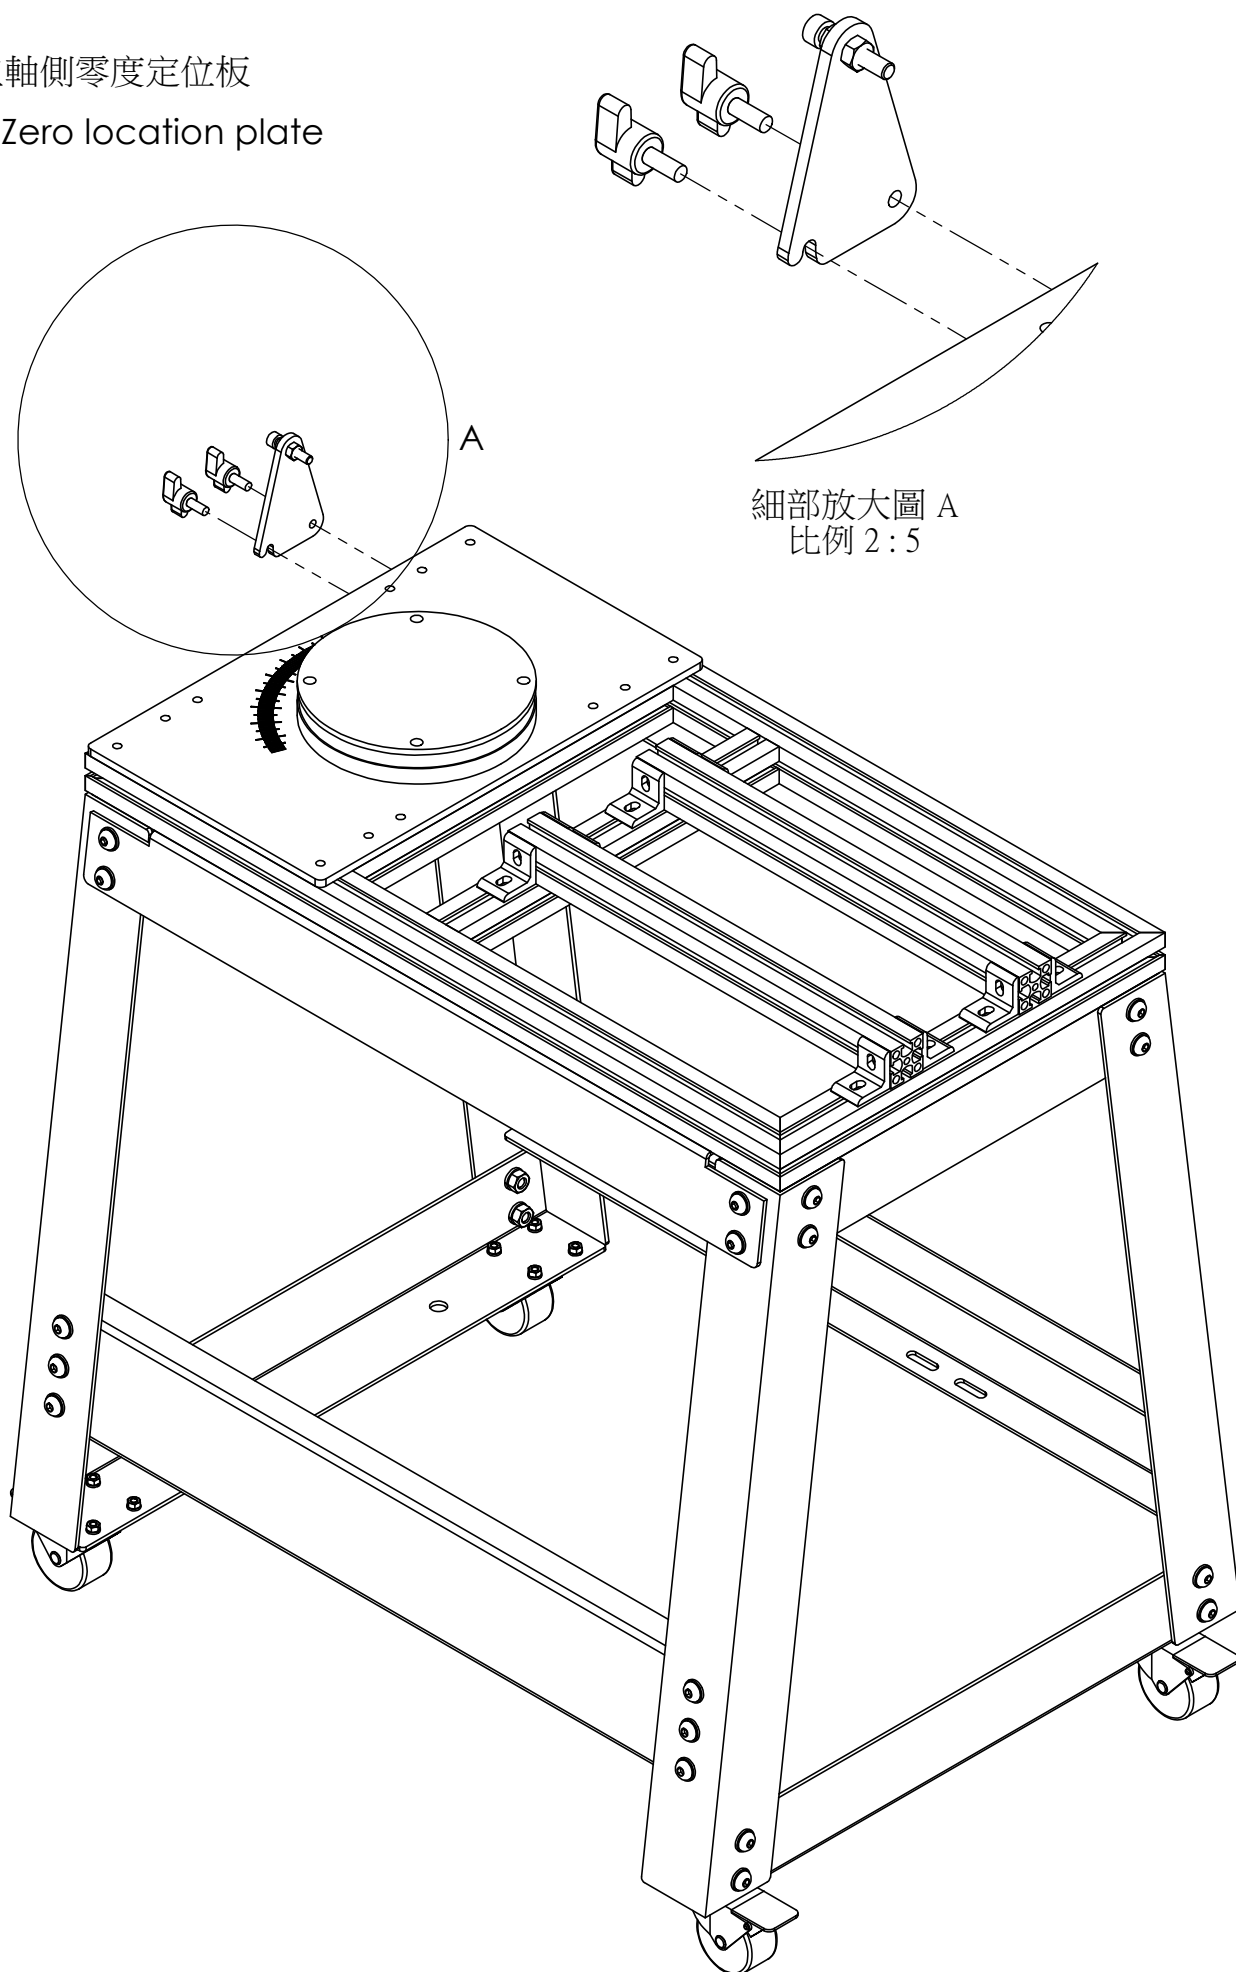


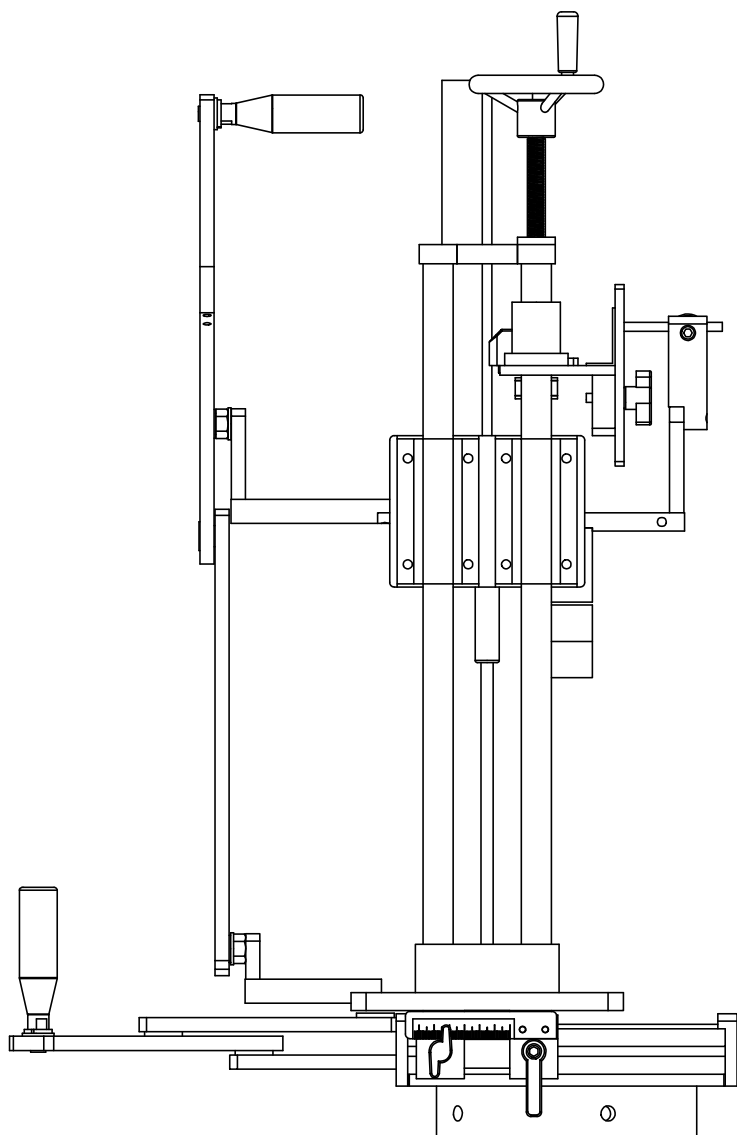

1. 將主軸機構裝回底座
2. 鎖上可調式把手

1. Install spindle structure.
2. Locking adjustable hand lever.

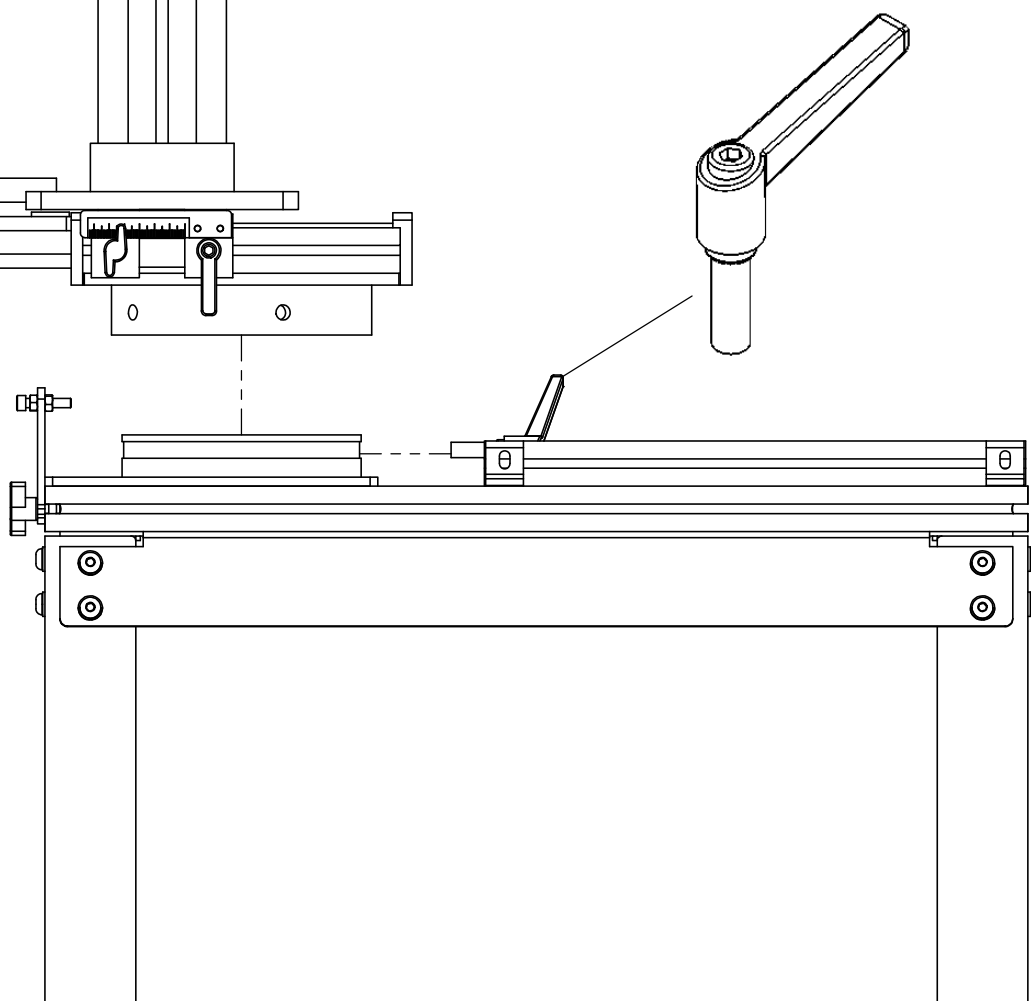

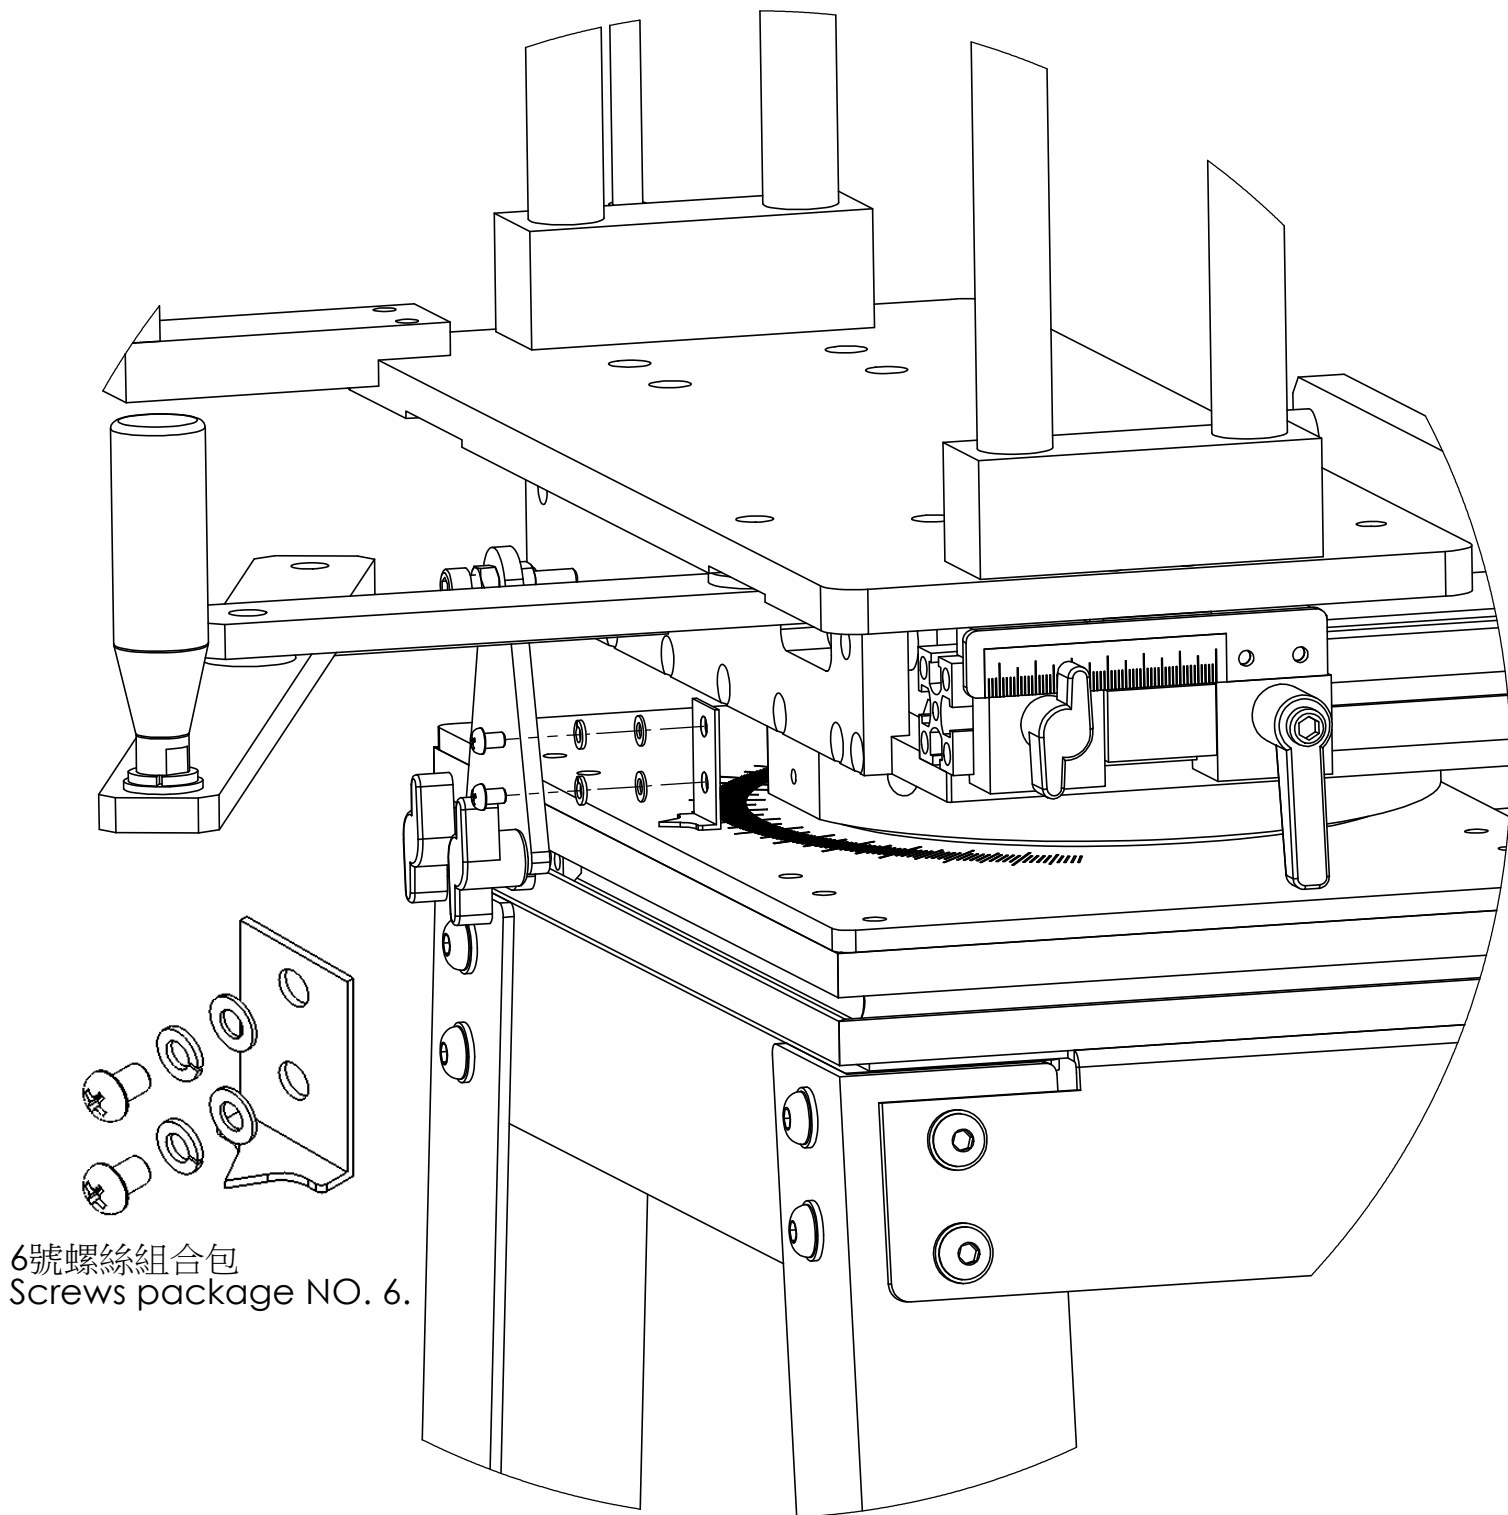

1. 使用6號螺絲組合包
2. 根據圖面裝上指針並對齊刻度0

1. Use the screw package No. 6
2. Follow the drawings to install pointer and makesure the tip on the zero scale.

1. 最後一步根據圖面將載台機構裝上

1. The final step follow the drawings to install the table structure.

